


6 Channel Micro Receiver DSM2/DSMX compatible

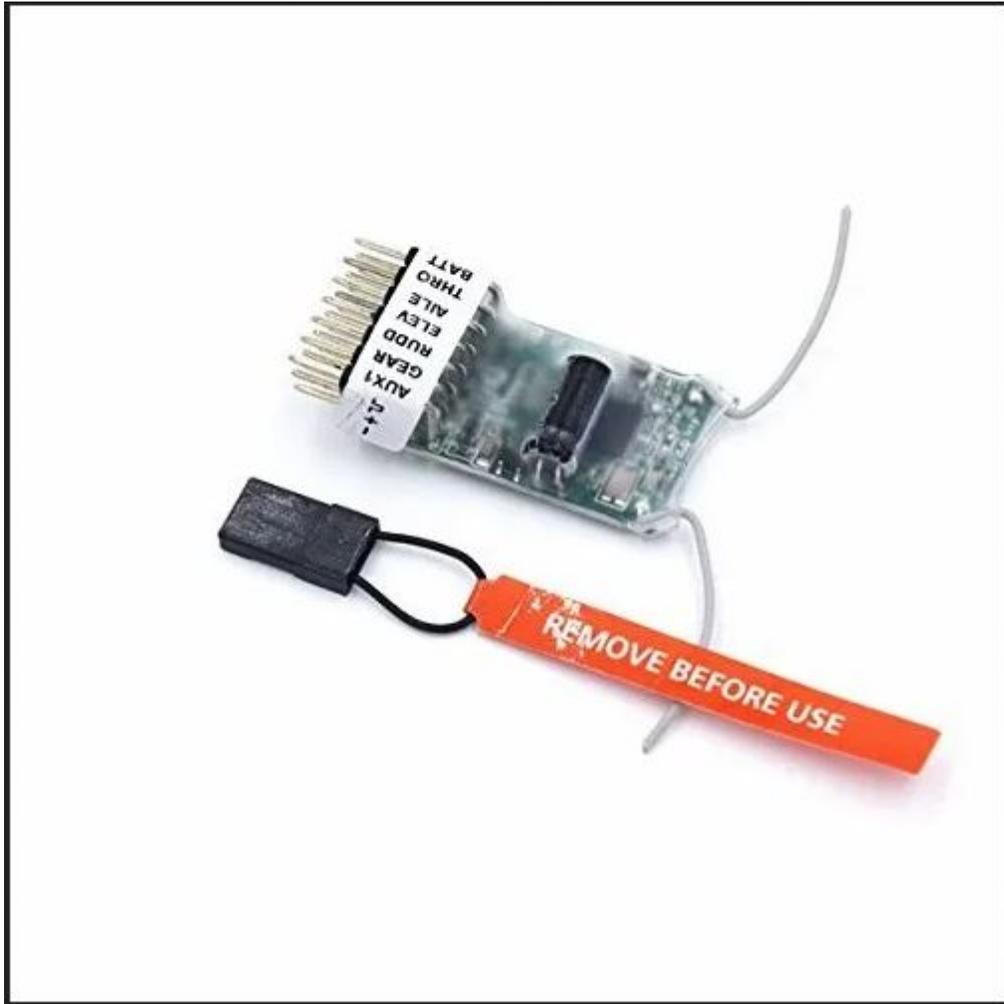

6 Channel Micro Receiver DSM2/DSMX compatible

Band: 2.4GHz

Channel: 6

Modulation: DSM2

Dimensions (W x Lx H): 19 x40x9mm

Weight: 4.4g

Voltage Range: 4-10v

Brown-Out Voltage: 4.0v (Always supply power above this voltage)

Antenna Length Main RX: 30mm

Expected Range: 400m (tested with JR DSX9)

Compatibility (Spektrum and JR DSM2): DX6I,DX7,DX8 DSX7,DSX9 DSX11

Features:

Patent pending Model Match prevents flying a model using the wrong model memory (feature does not work with module systems).

Servo Sync (feature does not work with module systems)

Preset failsafe system.

Quick Connect

Horizontal-Pin configuration

Red LED indicates number of hold

Binding Procedure:

1. Put the binding harness into connector location marked BATT. Next apply power to the receiver. Receiver LED should illuminate it means bind is accomplished
2. To set fail-safe throttle and control surface positions, (minimum throttle and all control surfaces set to neutral is suggested). Press and hold the bind button of transmitter (LED will illuminate), Turn on the transmitter.
3. Receiver LED will change from rapid flashing to slow flashing and a few seconds later when bind is accomplished the LED of receiver will illuminate solid. All fail-safes should be programmed correctly now.
4. Remove binding harness from the BATT channel. Restart the receiver by cycling it power off and turn on and connect battery into BATT channel is recommended. All channels should function properly now. You may test fail-safe by holding sticks in corner, cycle transmitter on and off. Surfaces and throttle should return to your preset fail-safe positions.

Note:

Only one bind procedure is required on a new receiver. Repetitive binding provides no extra security. Always remember to remove the binding harness after successful bind is completed.